







## Thule XT Kit 3034

# > Instructions

- VW California, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Transporter, 2-dr Single Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Double Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Van, (T5) 03-15, (T6) 15-

This kit is only for vehicles with fixpoint mounting or T-profile.

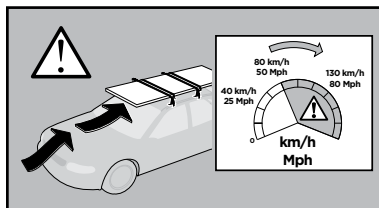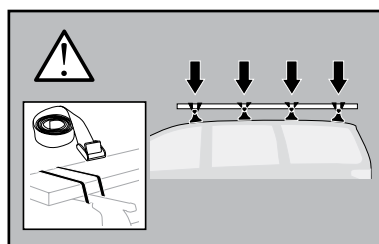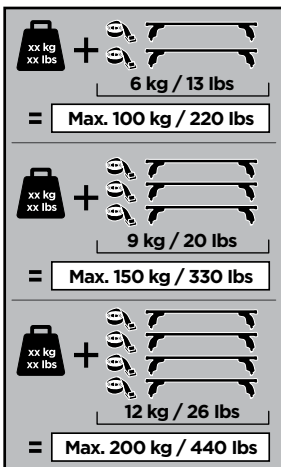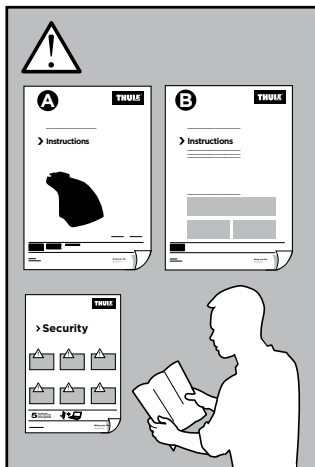










ISO 11154-E

183034




C.20150806  
509-3034-04

Bring your life  
thule.com



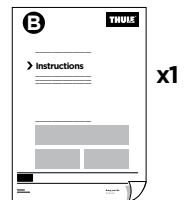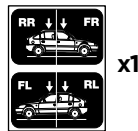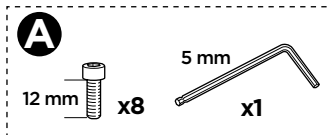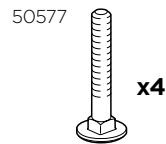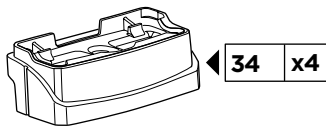


1

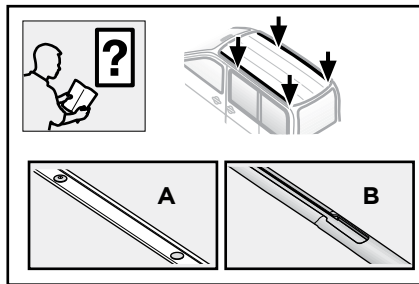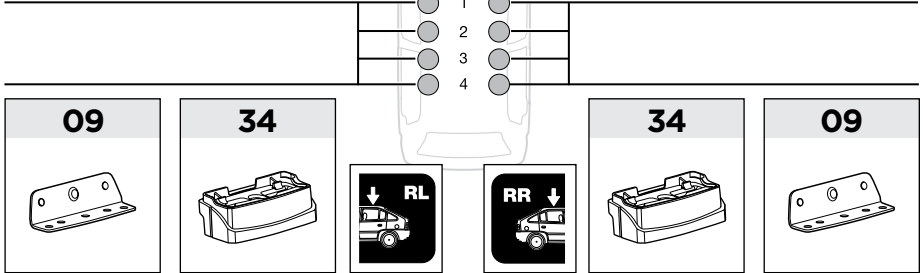
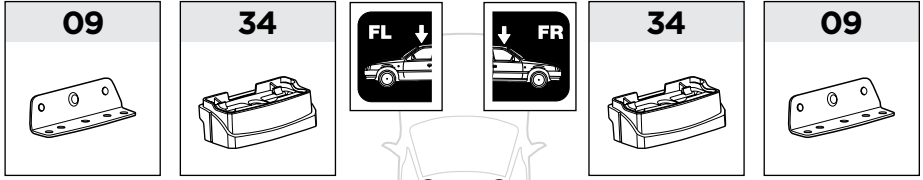


**2**


**A**

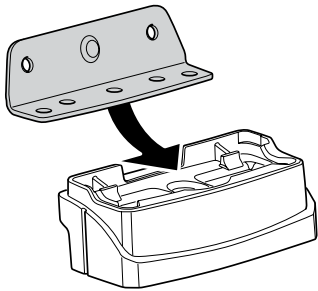


**B**

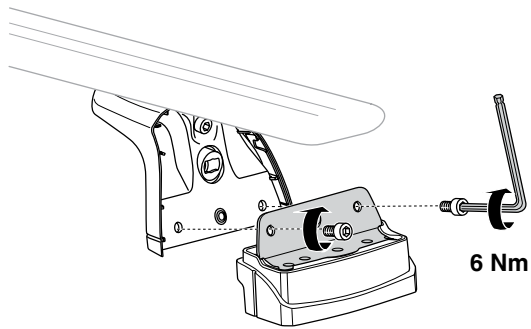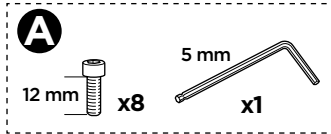


**3**








x1

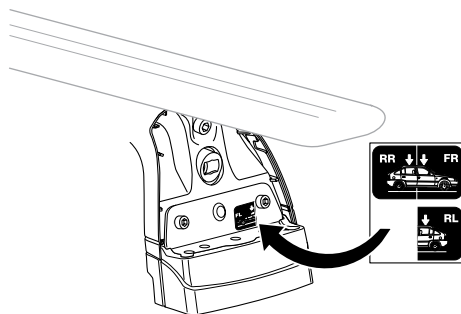


**4**




**A**

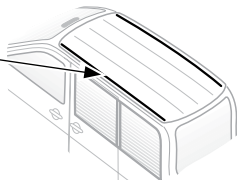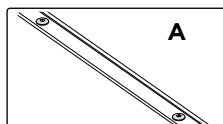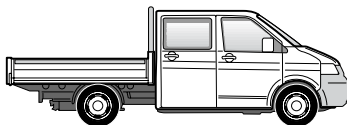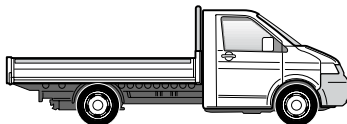


**A**

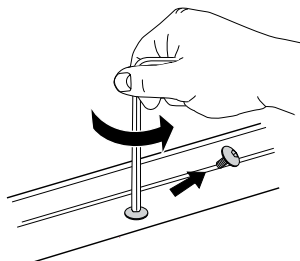


**B**

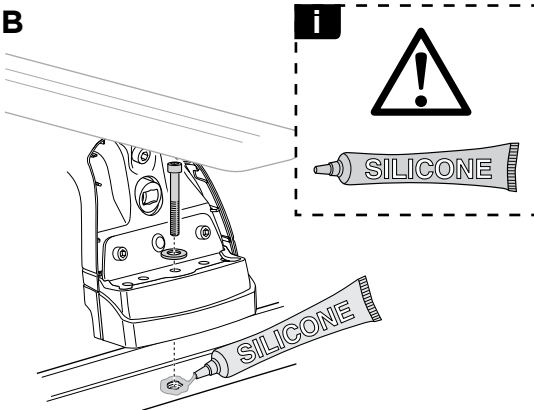






**C**

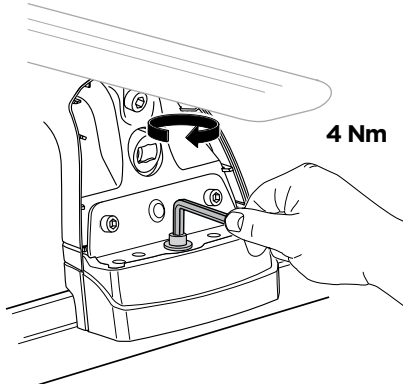



**D**

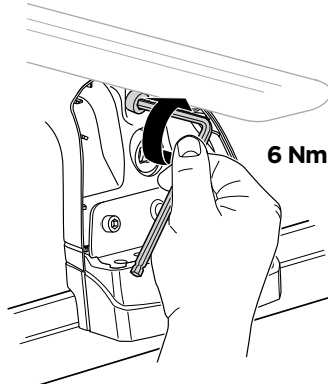


**4**

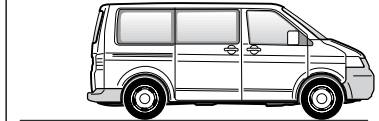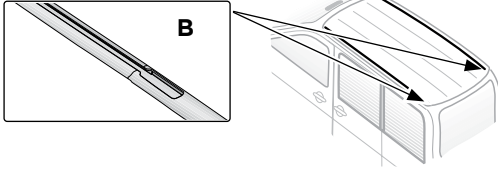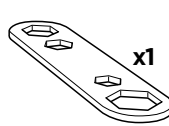


**A**

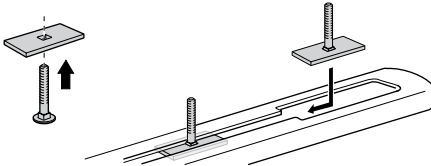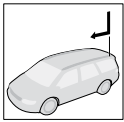

**B**

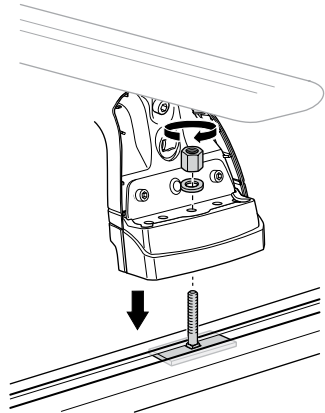

**C**

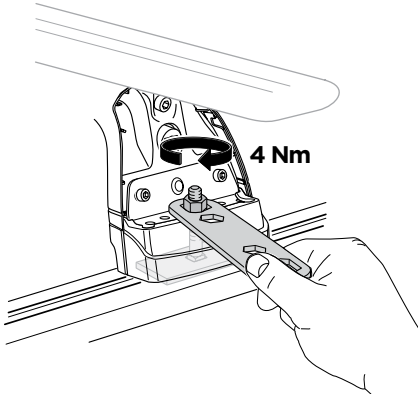

**D**

